


# Sisters-Camp Sherman RFPD

## Homeowner Instructions

The Fire Department is required by Oregon law to call for a “Utility Locate” before any fire address sign post can be put in the ground. This ensures that no utility wires/lines are near the placement sight. If the homeowner wants to choose the location where the sign will be placed, then the homeowner must mark the desired area before the Fire Department calls to request the Utility Locate. **The sign must be positioned so it can be easily seen by an emergency vehicle approaching from either direction (with no bushes or other objects blocking it). See the diagram below for the suggested placement.**

**Homeowner Responsibility:** place a white 5' radius circle (a can of white spray paints works well) around where you want the address sign placed. Do this on both sides of the driveway entrance in case there are utilities on one side or the other.

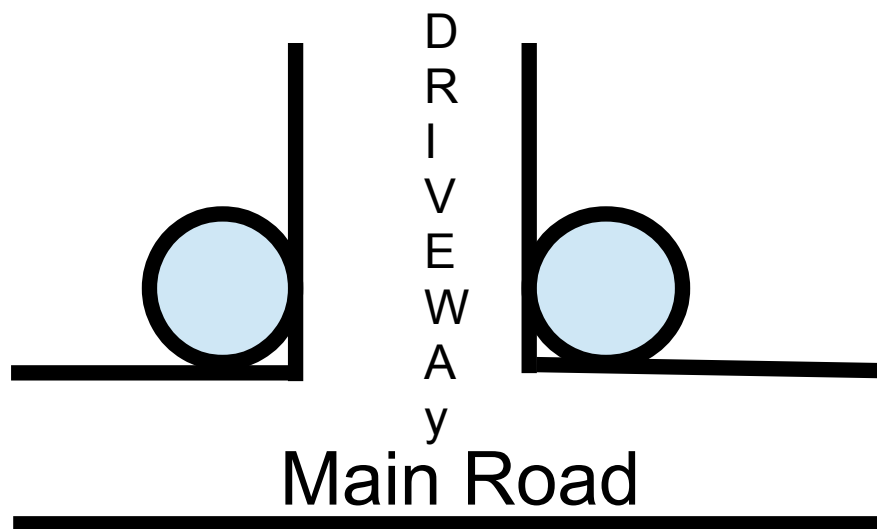

**After you have marked the locations call the fire station at 541-549-0771; give them your address and tell them you have marked the desired locations for the Utility Locators.**

After the locate you could see any or all of the following colors marked near your marked site:  
Underground facilities are marked with the following designated color codes:

<b>RED</b>	Electric power lines, cables or conduit, and lighting cables.
<b>YELLOW</b>	Gas, oil, steam, petroleum, or other hazardous liquid or gaseous materials.
<b>ORANGE</b>	Communications, cable TV, alarm or signal lines, cables or conduits.
<b>BLUE</b>	Water, irrigation, and slurry lines.
<b>GREEN</b>	Sewers, drainage facilities or other drain lines.
<b>WHITE</b>	Pre-marking of the outer limits of the proposed excavation or marking the centerline and width of proposed lineal installations of buried facilities.
<b>PINK</b>	Temporary Survey Markings.
<b>PURPLE</b>	Slurry and reclaimed.